

Hafele Hailo Euro Cargo ST 45/60 User Guide.

Introduction

Overview

This Package from Solid Setup adds Hafele Hailo Euro Cargo ST45 and ST60 Bin Drawers in dark grey.



Included in This Package

User Created Standards

• { DRAWS } -- Hafele HAILO EuroCargo ST

Material Schedules

Hafele Hailo EuroCargoST Std
Hafele Hailo EuroCargoST Frame
Drawer Guide Schedule for panel type drawer front
Drawer Guide Schedule for frame type drawer front

Materials

Hailo EuroCargo ST Std
Hailo EuroCargo ST Frame
Hailo EuroCargo ST45
Hailo EuroCargo ST45
Hailo EuroCargo ST60
Drawer Guide to drill frame type drawer front
Hafele Item Number 503.70.322
Hafele Item Number 503.70.445

Drawer Box Construction

Hafele Hailo EuroCargo ST
System Type Drawer Box



Euro Cargo ST 45/60 Usage

Minimum Sizes

Start with a drawer box which has the following space:

412-418mm internal opening width for the ST45 or

562-568mm internal opening width for the ST60


530mm minimum internal depth.

510mm minimum internal height.

Drawer Box Construction

"Hafele Hailo EuroCargo ST"




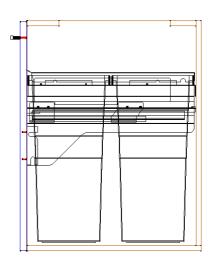


Drawer guide material

Drawer guides can be selected by either the Drawer Guide Schedule for the cabinet, or the Drawer Guide material for the drawer.

There are two types due to the two possible positions of the front brackets as shown here:

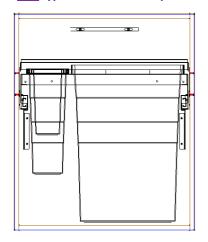



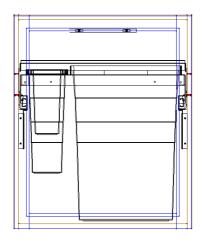

Frame (front brackets face out)

Drawer Guide Schedule (Section View - Properties tab, Hardware)



OR, Drawer Guide Material

- 1. Section view double click on Drawer front
- 2. Click the Drawer Box tab,
- 3. press the change button,
- 4. search for Hailo and select one of these then press OK:


Name	Description	Туре
Hailo EuroCargo ST Std	Hailo EuroCargo ST Standard	Drawer Guide
Hailo EuroCargo ST Frame	Hailo EuroCargo ST Frame	Drawer Guide



Drilling Settings

Drawer Guide Drilling

To Edit the drawer side or front drilling sizes use the Material Manager and search for Hailo. Double Click the "Hailo EuroCargo ST Std" or "Hailo EuroCargo ST Frame" Drawer Guide material Edit the hole sizes shown here to your preferences:

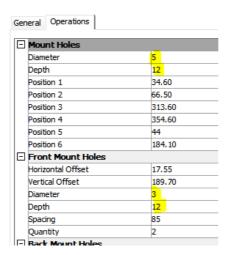

Shelf/Lid Side Plate Drilling

The "{ DRAWS } -- Hafele HAILO EuroCargo ST" UCS has 2 public variables for the side plate drilling.

• To edit them to change these variables go to the Utilities – Edit User Created Standards from the Room Plan or Elevation views



- Then click on the "{ DRAWS } -- Hafele HAILO EuroCargo ST" UCS.
- On the top right hand side of the screen you will see the Public Variables list:

Prompt:	Value:	Description:
Side Plate Holes Depth	12mm	Set Depth of Side Plate Holes
Side Plate Holes DIA	3mm	Set Diameter of Side Plate Holes